


DATE	May 2009	PRODUCT	ALL LOW PRESSURE STRIPERS INCLUDING BS1400, BS1500, BS1600 and BS2000
-------------	----------	----------------	---

ISSUE	SHUT-OFF VALVE LEAKING
--------------	------------------------

SOLUTION	PERFORM A SIMPLE MAINTENANCE CLEAN UP
-----------------	---------------------------------------

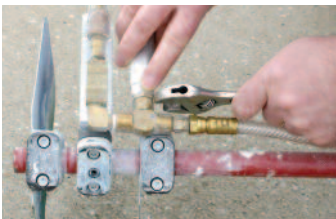

PROCEDURE

- A. Loosen and remove paint control cable from paint control lever
- B. Pull cable through cable tie
- C. Loosen and remove shut-off stem and nut from shut-off tee (Be careful not to kink cable)
- D. Clean out shut-tee, stem and spring with Pioneer PHD Cleaner or equivalent
- E. Lubricate spring and o-ring with Misty Slip Shot or equivalent
- F. Carefully reassemble valve, using caution not to cross-thread valve or kink cable
- G. Thread cable through cable tie and reattach paint control cable to paint control lever
- H. Adjust paint control lever, leaving some slack in cable